

Terms of use of Drag bag

The product is made of 100% polyester fabric and plastic parts that are prone to wear, improper use or maintenance can damage some parts of the product over time.

The product is resistant to water splashes and dust. However, the durability of the product is not permanent and may decrease over time due to normal wear and tear. The product is intended for indoor use. Damage of the type corresponding to improper use or exposure to the effects described below is not covered by the warranty. Drag bags can be damaged or more prone to damage if they are exposed to the following influences:

- temperatures outside the range of -5 to + 40 ° C
- use on rough surfaces and outdoors
- poor mounting and adjustment
- excessive and unresolved soiling

Do not leave the dog unattended when using a drag bag. Do not use it for dogs with healthy hind legs! Injury to the dog and damage to the product may occur.

Attaching the drag bag:

- 1) Place the drag bag on the ground with the net facing up and open one or both zippers.
- 2) Put the dog in the bag so that the hind legs and back part of the body are on the mat.
- 3) Fasten the zippers.
- 4) Put on the collar in such a way that the part leading from the bag to the collar is between the front legs.
- 5) Adjust the collar and the bag so that the bag fits well.
- 6) If necessary, fasten the rear strap leading from the net section to the collar.

Recommended storage:

Store indoors.

Washing instructions:

Wash at max. 40 degrees, do not tumble dry, iron to a minimum; pull out the foam pad before washing. Do not wash the foam pad in the washing machine; wipe with a damp cloth with detergent.